


Turning On the Projector

Tap the black button on the touchscreen to turn the projector on and lower the projector screen.

Please wait while the system starts up.

This text will appear on the screen as the system starts up.

SOURCE SELECTION

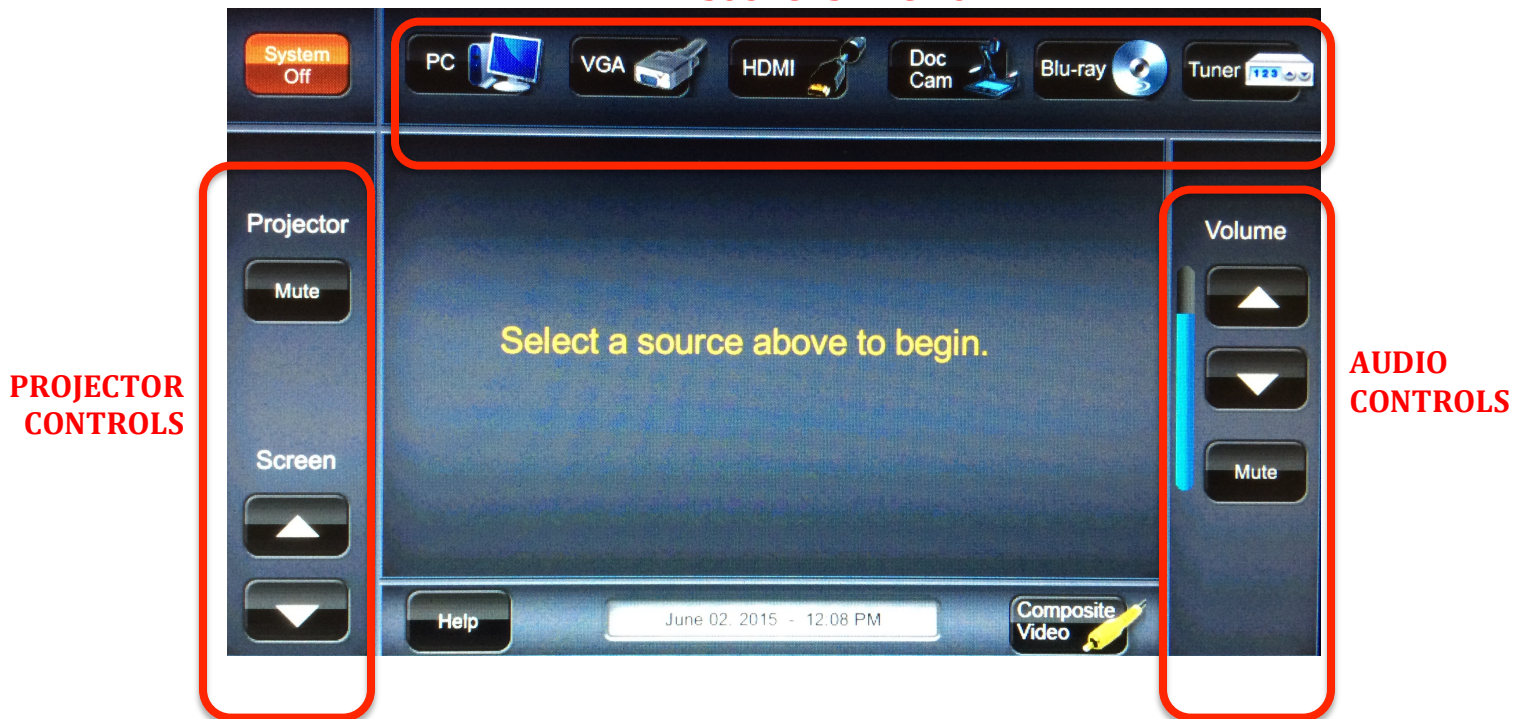

PROJECTOR CONTROLS:

Press the UP and DOWN arrow buttons to move the projector screen up and down and the mute button to hide the image being displayed by the projector without turning it off.

SOURCE SELECTION:

Press a button to display the selected source on the projector. These buttons will also display additional controls for the document camera, blue ray player, and TV Tuner.


AUDIO CONTROLS:

Press the UP and DOWN arrow buttons to control the source audio volume, and the mute button to mute all audio from the selected source.

Turning Off the Projector

Tap the SYSTEM OFF button to simultaneously raise the projector screen and power down the projector.

Please power down the projector after you are done using it.

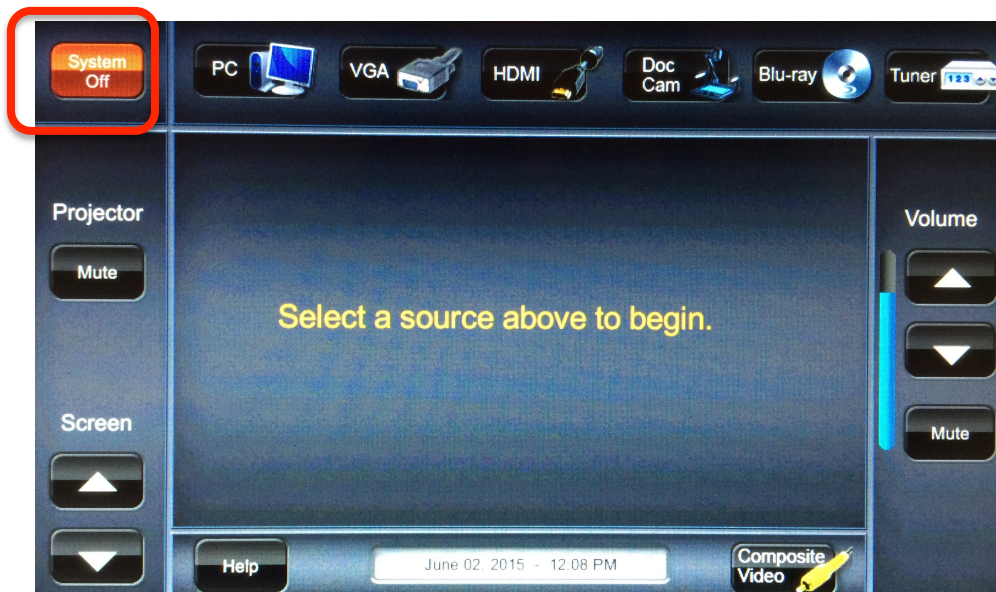

**FOR ADDITIONAL HARDWARE ASSISTANCE,
CONTACT THE ATC:**

E-MAIL: ATC@WPI.EDU

EXTENSION: x5220